




ASSEMBLY INSTRUCTION

neutriCON | Cable Connector

Standard & Crimp Version SR8 A/B

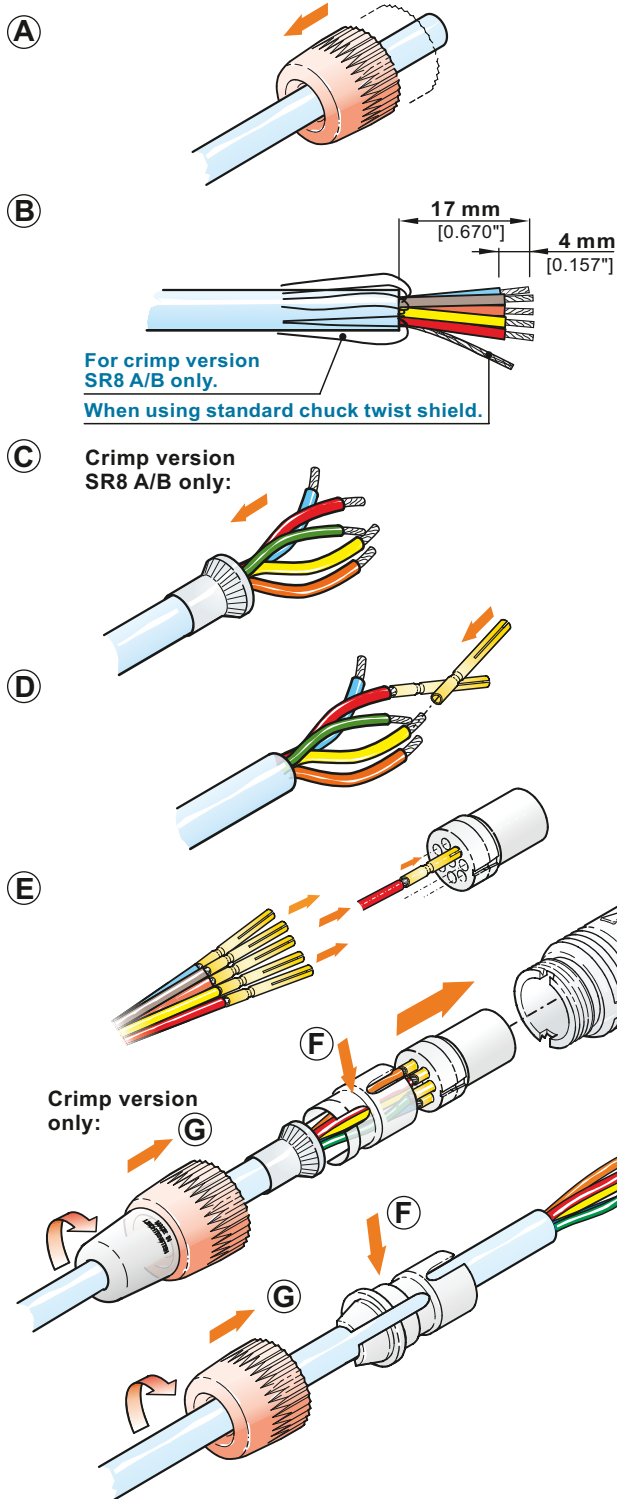

- (A) Put the bushing onto the cable.
- (B) Prepare cable as shown.
- (C) Crimp version only:
Fold back the shield.
Slide crimp ferrule onto the cable.
- Use our HX-R-BNC crimp tool with the appropriate die (see ordering info) to crimp the ferrule.
- (D) Wire contacts:
Solder standard contacts.
- (E) Snap contacts into insert.
Contact Arrangement:
Male
Female
- (F) Press chuck onto cable.
- (G) Slide insert and chuck into the housing and fasten the bushing.

Same procedure for MC & SC housing with female or male inserts!

Neutrik AG
Neutrik USA Inc.
Neutrik (UK) Ltd.
Neutrik Vertriebs GmbH

LI
USA
UK
DE/NL/AT/DK

T: +423 / 237 24 24
T: +1 704 / 972 3050
T: +44 1983 / 811 441
T: +49 8131 / 280 890

F: +423 / 232 53 93
F: +1 704 / 438 9202
F: +44 1983 / 811 439
F: +49 8131 / 280 830

Neutrik France
Neutrik Tokyo Ltd.
Neutrik Hong Kong Ltd.
Neutrik India Pvt. Ltd.

FR
JP
HK
IND

T: +33 1 / 4131 6750
T: +81 3 / 3663 4733
T: +852 / 2687 6055
T: +91 / 982 05 43 424

F: +33 1 / 4131 0511
F: +81 3 / 3663 4796
F: +852 / 2687 6052
F: +91 / 22 26163 540

Draft. Nr.: BDA 124 | Update: 2020-08-07 | Data subject to change without prior notice. © 2020 NEUTRIK®. NEUTRIK® are registered trademark of Neutrik AG. ALL RIGHTS RESERVED.

www.neutrik.com

NEUTRIK